




1 Insert rubber feet into bracket.



2 Secure bracket with bolts and tighten with 10mm spanner.

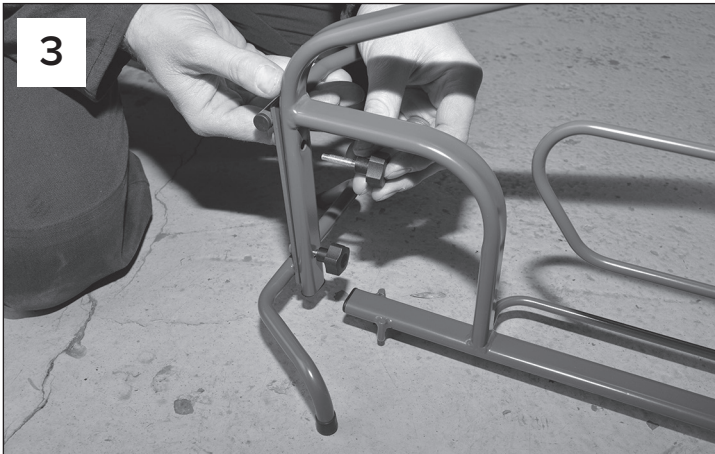

3 Secure the other bracket with hand screws.



4 Lower rear seats and insert the dog guard.



5 Ensure seat belt runs through the guard as shown. Tighten rubber feet.



6 With guard in place, clip the securing belt into place and pull the belt to tighten.



Britpart

The Grove, Craven Arms,
Shropshire, SY7 8DA United Kingdom
www.britpart.com

VR. 2

Disclaimer

These fitting instructions are intended for general guidance only. No responsibility will be accepted for damage to persons, property, equipment or vehicles caused during or arising from the fitting or using of this product. Fitting this item to your vehicle may constitute a vehicle modification and therefore we strongly recommend that you check the product complies with local laws and legislation and always inform the vehicle's insurance company accordingly.