

FITTING INSTRUCTIONS

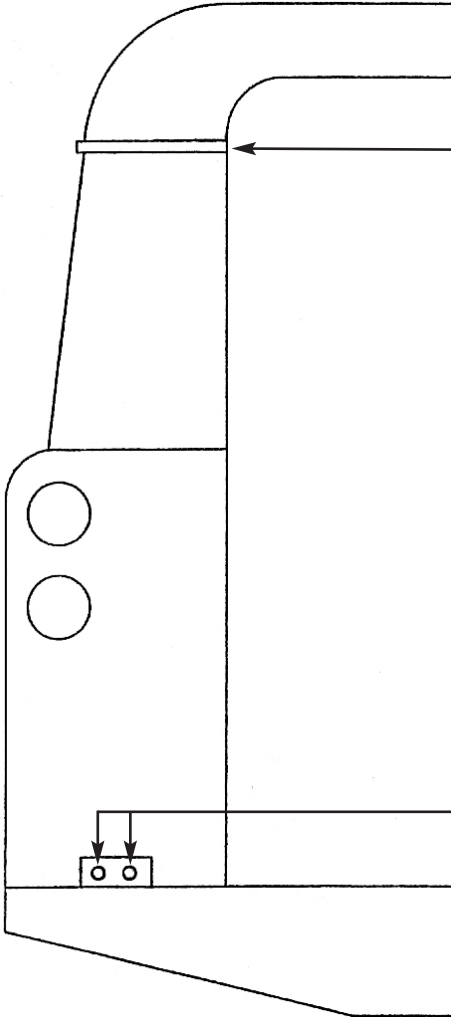


Fig. 2
Top of ladder fits over drip rail.

1. Remove the two bolts left hand side rear cross member (fig. 1).
2. Apply self-adhesive sponge to drip rail.
3. Hook the access ladder onto drip rail on the left hand side of the vehicle (fig. 2)
4. Fix the bottom ladder bracket with the cross member bolts, as the bolts begin to pinch the bracket, pull down on the ladder to secure in place. Complete tightening the bolts.

Fig. 1
Remove these two bolts and replace when ladder is fitted.

Disclaimer

These fitting instructions are intended for general guidance only. No responsibility will be accepted for damage to persons, property, equipment or vehicles caused during or arising from the fitment or using of this product. Fitting this item to your vehicle may constitute a vehicle modification and therefore we strongly recommend that you check the product complies with local laws and legislation and always inform the vehicle's insurance company accordingly.

