
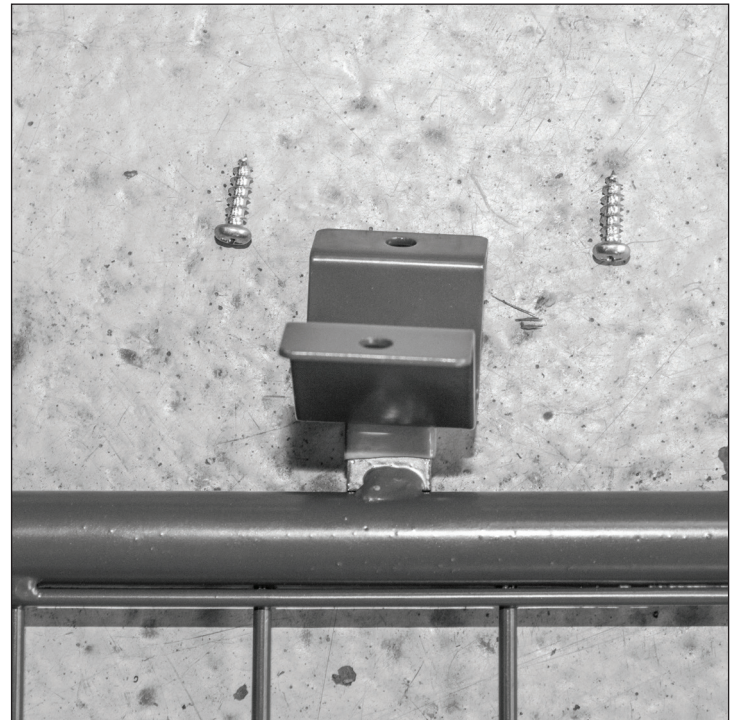


### Kit contents -

- 1 x Dog guard
- 2 x Mounting feet
- 2 x Stiffening plates
- 4 x M8 set screws
- 4 x M8 nuts
- 8 x M8 flat washers
- 4 x M8 spring washers
- 2 x M8 thumbscrews
- 1 x Top bracket
- 2 x 10 x screws - discard on pre-1989 models

- > Attach mounting feet to dog guard using thumbscrews.
- > Tilt front seat and slide forward.
- > Pass assembled dog guard into vehicle with mountings anchored forward and resting on top of bulkhead.
- > Centralise dog guard in vehicle and mark rivet heads (visible through slots in feet).
- > Remove dog guard and drill out rivets using M9 (11/32") drill.
- > Attach top bracket onto locating tab on top edge of dog guard (with angled face rearwards).
- > Refit dog guard and mount in position using fixings supplied (see illustration) and tighten all bolts.
- > Lift top bracket until contact with headlining is made and mark 2 holes.
- > Drill through headlining and roof channel using 4.0mm drill **TAKING CARE NOT TO DRILL THROUGH THE ROOF.**
- > Fasten top bracket into position using self tapping screws.

**Note** - If alarm sensor fitted, locate aperture behind headlining approx 70mm up and 130mm forward of present position. Relocate sensor and cover original aperture.

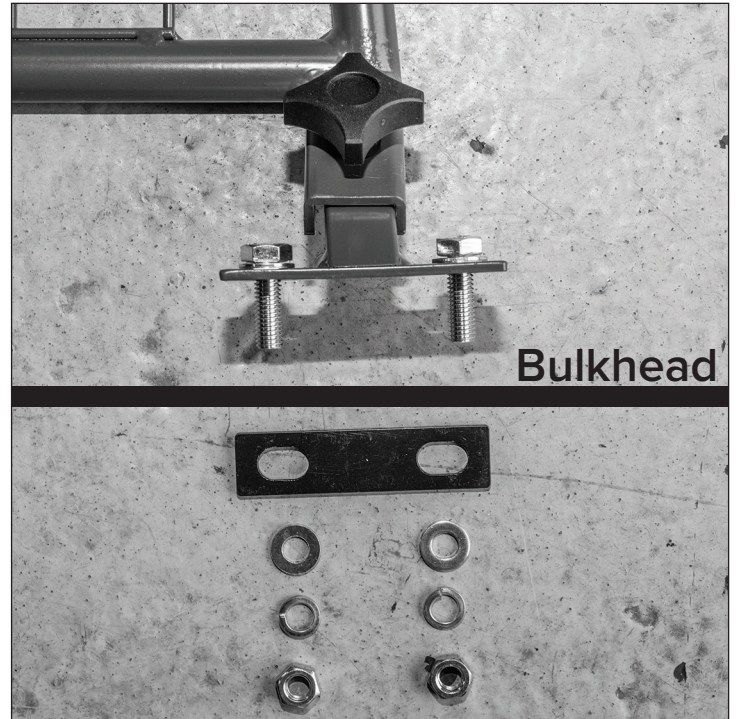

### Britpart

The Grove, Craven Arms,  
Shropshire, SY7 8DA United Kingdom  
www.britpart.com

VR. 2

### Disclaimer

These fitting instructions are intended for general guidance only. No responsibility will be accepted for damage to persons, property, equipment or vehicles caused during or arising from the fitting or using of this product. Fitting this item to your vehicle may constitute a vehicle modification and therefore we strongly recommend that you check the product complies with local laws and legislation and always inform the vehicle's insurance company accordingly.